2007 ACCESSORIES AND EQUIPMENT Speed Control - Nitro

### 2007 ACCESSORIES AND EQUIPMENT

**Speed Control - Nitro** 

## SPEED CONTROL

**SWITCH** 

REMOVAL

REMOVAL

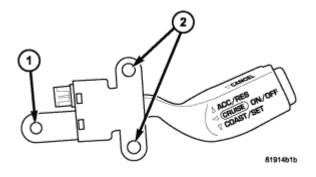


Fig. 1: Speed Control Switch Courtesy of CHRYSLER LLC

Mounting hole (1) uses a screw. Depending on model line, mounting holes (2) may use either two screws, or one screw and a locating pin.

#### **WARNING:**

Do not place a non-deployed airbag face down on a hard surface as the airbag will propel into the air if accidentally deployed, and could result in serious or fatal injury.

Disconnect and isolate the battery negative (ground) cable before beginning steering wheel removal or installation. This will disable the front airbag system. Failure to disconnect the battery could result in accidental front airbag module deployment and possible personal injury.

Allow the front airbag system capacitor to discharge for two minutes before removing the steering wheel or any front airbag system component.

The speed control switch is mounted in the steering wheel and wired through the clock spring device under the airbag module.

1. Adjust steering wheel until tires are in STRAIGHT-AHEAD position.

## 2007 ACCESSORIES AND EQUIPMENT Speed Control - Nitro

- 2. Remove negative battery cable.
- 3. Turn off ignition.
- 4. Remove air bag. Refer to **REMOVAL**.

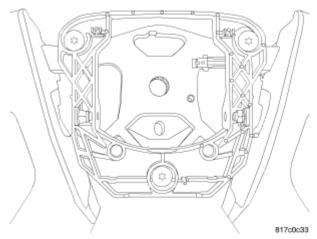


Fig. 2: Horn Switch Courtesy of CHRYSLER LLC

- 5. Disconnect connector from clockspring.
- 6. Remove three mounting fasteners.
- 7. Remove horn switch.

2007 ACCESSORIES AND EQUIPMENT Speed Control - Nitro

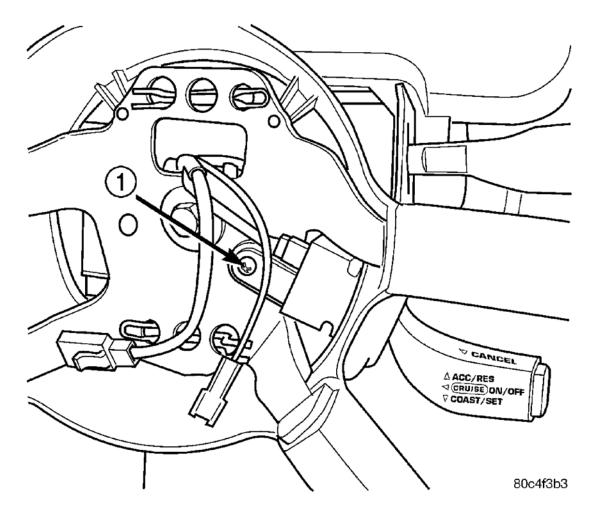


Fig. 3: Speed Control Switch Mounting Screws Courtesy of CHRYSLER LLC

- 8. Remove either two or three speed control switch mounting screws (1).
- 9. Disconnect electrical connector.
- 10. Remove switch.

#### **INSTALLATION**

### INSTALLATION

2007 ACCESSORIES AND EQUIPMENT Speed Control - Nitro


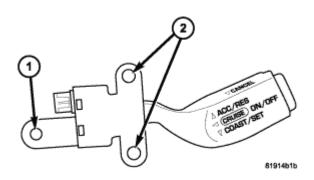


Fig. 4: Speed Control Switch Courtesy of CHRYSLER LLC

Mounting hole (1) uses a screw. Depending on model line, mounting holes (2) may use either two screws, or one screw and a locating pin.

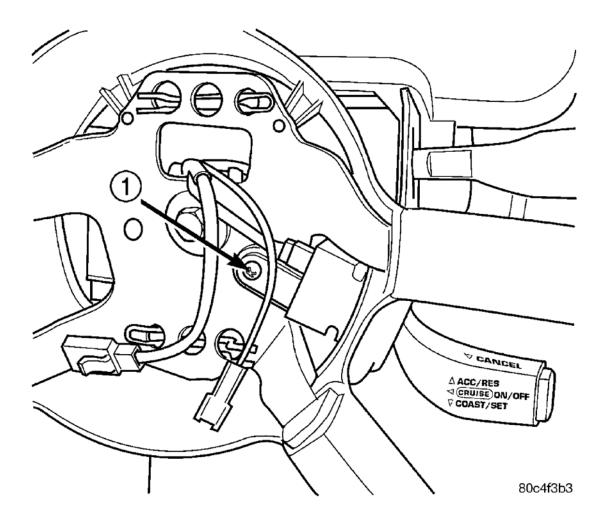

2007 ACCESSORIES AND EQUIPMENT Speed Control - Nitro

## Fig. 5: Speed Control Switch Mounting Screws Courtesy of CHRYSLER LLC

- 1. Connect electrical connector to speed control switch.
- 2. Install speed control switch mounting screws.
- 3. Tighten screws (1) to 1.6 N.m (15 in. lbs.). Make sure rubber seal is in place around switch.

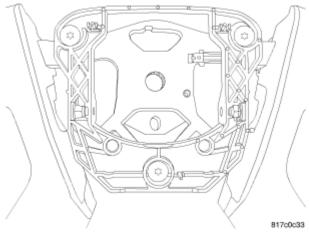


Fig. 6: Horn Switch
Courtesy of CHRYSLER LLC

- 4. Install horn switch.
- 5. Install three mounting fasteners.
- 6. Connect electrical connector to clockspring.
- 7. Install driver airbag. Refer to **INSTALLATION**.

WARNING: Do not connect battery negative cable yet. Refer first to airbag system test. Refer to <u>DIAGNOSIS AND TESTING</u>.

- 8. Reconnect battery using Airbag System Test procedure in Restraints. Refer to **DIAGNOSIS AND TESTING**.
- 9. Close hood.
- 10. Verify vehicle and system operation.